








c|b

FENSTER & TÜREN

FARBPALETTE HOLZ

WOOD COLOURS – SEMI-GLOSS

	PINE ↓	MERANTI ↓	OAK ↓	SPRUCE ↓
1. STONE PINE				
		P: TM-9072/13	N: TM-9058/13	
2. OLD PINE				
		P: TM-9073/13	N: TM-9059/13	
3. CYPRESS				
		P: TM-9074/13	N: TM-9060/13	
4. IROKO				
		P: TM-9073/13	N: TM-9061/13	

I: TEKNOL AQUA 1410-01 wood preservative

P: AQUAPRIMER 2900-22 Glaze primer



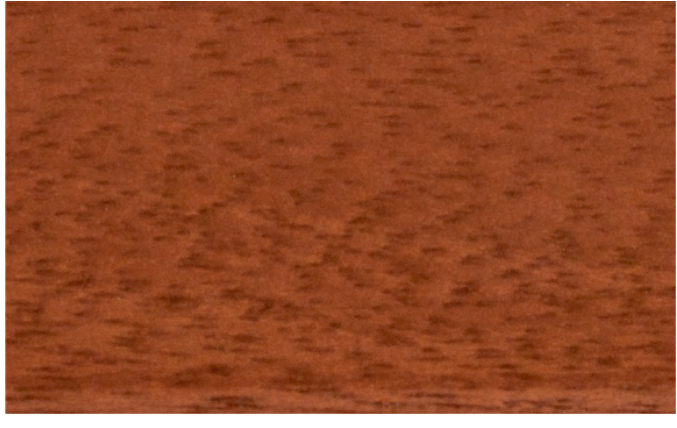





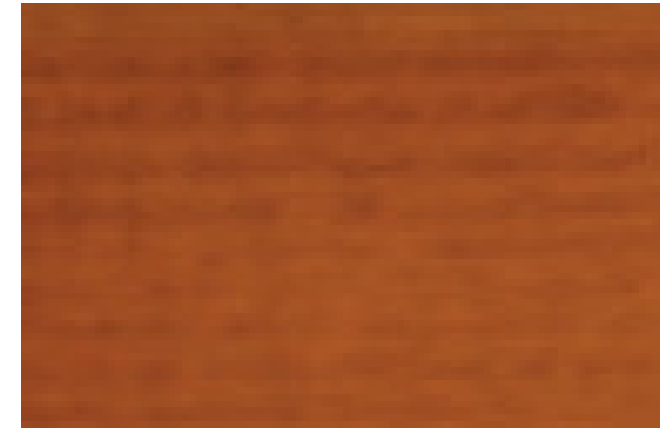
M: Intermediate layer AQUAFILLER 5000-00

W: fillers TEKNOSEAL 4009-00 / 4000-00

N: Topcoat: AQUATOP 2600-94

Sample colours are a guideline only, as the colours may vary depending on the type of wood, its natural colour and the topcoat thickness.

WOOD COLOURS – SEMI-GLOSS

	PINE ↓	MERANTI ↓	OAK ↓	SPRUCE ↓
5. CHESTNUT				
		P: TM-9073/13	N: TM-9062/13	
6. IDIGBO				
		P: TM-9075/13	N: TM-9064/13	
7. SAPELLI				
		P: TM-9075/13	N: TM-9065/13	
8. OAK				
		P: TM-9075/13	N: TM-9066/13	

I: TEKNOL AQUA 1410-01 wood preservative

P: AQUAPRIMER 2900-22 Glaze primer










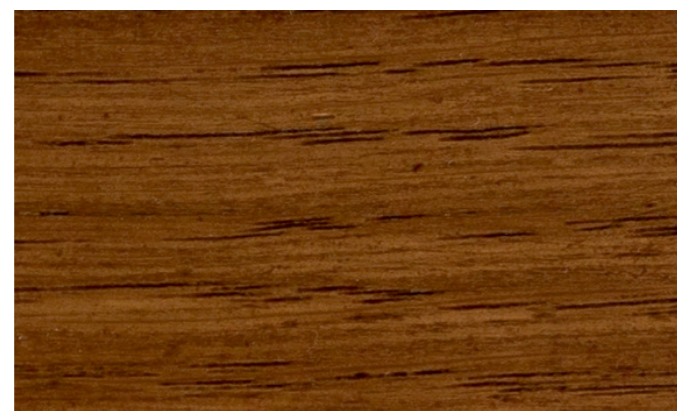
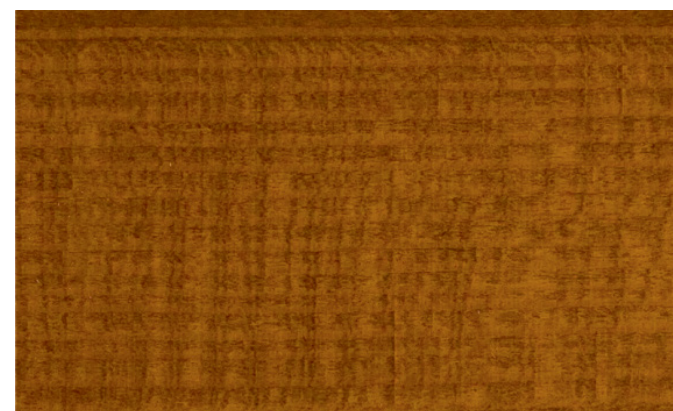


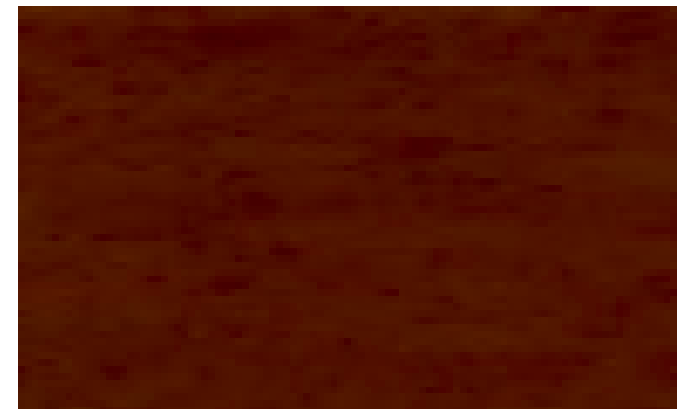

M: Intermediate layer AQUAFILLER 5000-00

W: fillers TEKNOSEAL 4009-00 / 4000-00

N: Topcoat: AQUATOP 2600-94

Sample colours are a guideline only, as the colours may vary depending on the type of wood, its natural colour and the topcoat thickness.

WOOD COLOURS – SEMI-GLOSS

	PINE ↓	MERANTI ↓	OAK ↓	SPRUCE ↓
9. MAHOGANY				
		P: TM-1067	N: TM-8928/12	
10. CALVADOS				
		P: TM-9076/13	N: TM-9067/13	
11. WALNUT				
		P: TM-9077/13	N: TM-9080/13	
12. KEMPAS				
		P: TM-9076/13	N: TM-9068/13	

I: TEKNOL AQUA 1410-01 wood preservative

P: AQUAPRIMER 2900-22 Glaze primer













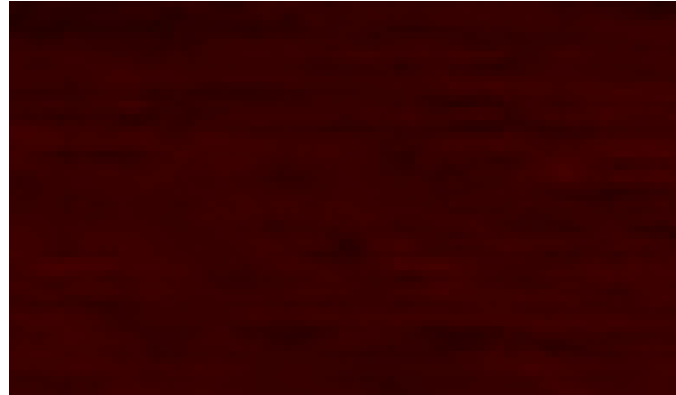



M: Intermediate layer AQUAFILLER 5000-00

W: fillers TEKNOSEAL 4009-00 / 4000-00

N: Topcoat: AQUATOP 2600-94

Sample colours are a guideline only, as the colours may vary depending on the type of wood, its natural colour and the topcoat thickness.

WOOD COLOURS – SEMI-GLOSS

	PINE ↓	MERANTI ↓	OAK ↓	SPRUCE ↓
13. ASSAMELA				
		P: TM-9077/13	N: TM-9069/13	
14. CHERRY TREE				
		P: TM-9077/13	N: TM-9070/13	
15. WENGE				
		P: TM-9077/13	N: TM-9099/13	
16. ACAJOU				
		P: TM-9077/13	N: TM-9071/13	

January 2023

I: TEKNOL AQUA 1410-01 wood preservative

P: AQUAPRIMER 2900-22 Glaze primer

M: Intermediate layer AQUAFILLER 5000-00

W: fillers TEKNOSEAL 4009-00 / 4000-00

N: Topcoat: AQUATOP 2600-94

Sample colours are a guideline only, as the colours may vary depending on the type of wood, its natural colour and the topcoat thickness.